 


ToSee

DETECT | CONNECT | PROTECT



SENTINEL



User Guide

Application Download

Search "Smart Life" in your mobile app store, (Google Play for Android or App Store for IOS)



Follow the app instructions to set up device or refer to enclosed Smart Life App User Manual included within your doorbell packaging.

2C-20B

WHAT'S INCLUDED

- 1 x Wifi Security Video Doorbell
- 1 x Door Chime
- 1 x USB Charging Cord
- 1 x 16gb Micro SD Card (Built In)
- 3 x Rechargeable Batteries
- 1 x Adapter Mounting Plate
- Device and APP user manuals
- Mounting Fixings for Installation
- 1 x Installation Tool

Device Requirements



Android 4.1 or higher




iOS 8.0 or higher

Please Note

Remove all (3) green battery terminal protectors from the base of each battery.


Fully charge SENTINEL doorbell prior to installing - use USB charging port located at the top of the doorbell. Slide back plate to expose port and SD card.

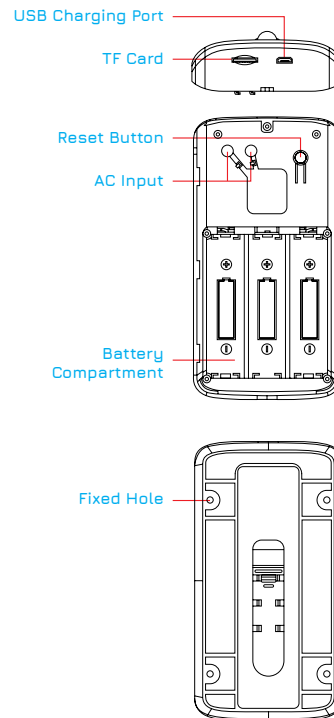

Installation

Place mounting plate in position and mark fixing holes with a marker, drill holes using a 6mm masonry drill bit and insert wall plugs.

Place mounting plate in place using fixings enclosed to attach to wall. Insert doorbell onto mounting plate and slide down to fix in place.

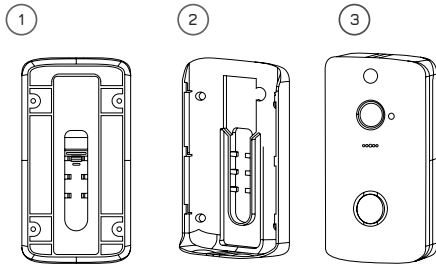

Step 1

Remove the back bracket

Step 2

Use 4 mounting screws to fix the back bracket onto your door or wall. You can also use double-sided tape to fix the back bracket

Step 3

Fit the doorbell into the back bracket. Use the provided security screw to secure the doorbell so the doorbell cannot be removed easily.

Notice



Use the enclosed security screw and installation tool to lock in doorbell to prevent theft.

Pairing of Chime


Plug the chime into a conventional power socket.

Pairing - Press the WiFi Chime volume button for 5 seconds, the LED light will flash, then press the button of wi-fi SENTINEL doorbell within 5 seconds. When the chime LED flashes, the pairing will be completed.

Overview of the Wireless Chime

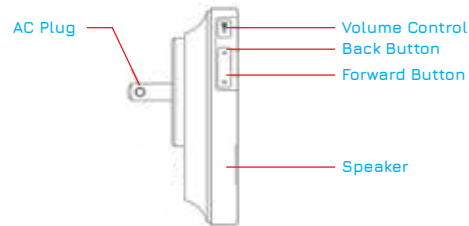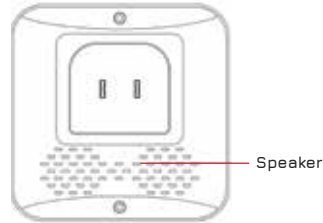

Pairing of Chime

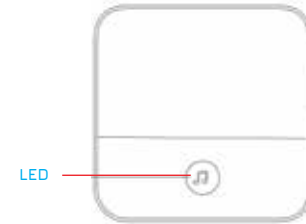

Choosing Melody

Press the up or down key to cycle through the range of available melodies. There are 52 to choose from.

Once you find a melody that you like, hold the volume button for 5 seconds till the music indicator light turns on. It is now in the learning state.

When this is done press the button of the SENTINEL wifi doorbell. When the chime flashes the new melody is set and set up is completed.

